


Watts Series 9DM2, 9DM3 Installation Instructions

RP/IS-9D

Note: Model 9DS - Remove union connections before sweating

- The 9D Dual Check with Atmospheric Vent is designed for use on non health hazard, continuous pressure, point of use applications for protection against backsiphonage and backpressure. Install in accordance with the local codes.
- Remove union connections before sweating.
- For the best system performance, install on the fresh water feed line before any pressure regulators (such as the Watts Series 1156 on a residential boiler application).
- Flush the line before installing the unit to remove any solder, flux or pipe chips. Clean the strainer every six months or as conditions require.
- Some discharge is expected, particularly on start-up, until all seating surfaces seal. Continuous discharge is an indication that the internal seating parts and surfaces may require the cleaning.
- May be installed horizontally or vertically.
- Quick closing valves, water hammer or supply pressure fluctuations can cause intermittent discharge. The installation of a Water Hammer Arrestors (Watts Series 05) or Water Pressure Regulator (Watts Series 1156 or 25AUB) may be required to correct the problem.
- It is important not to install where the discharge could cause damage. Pipe the discharge line in accordance with local code requirements. A physical air gap must be maintained between the discharge pipe and the drain or sump. Create the air gap by cutting the pipe on a 45° bevel, at a distance of 12" above the floor. If used on boiler applications do not use an air gap fitting at face level so as to prevent personal injury from scalding water or steam.
- If local codes require the device be tested it must be installed as shown in the drawing on the reverse side.

Model 9D Heating System Installation

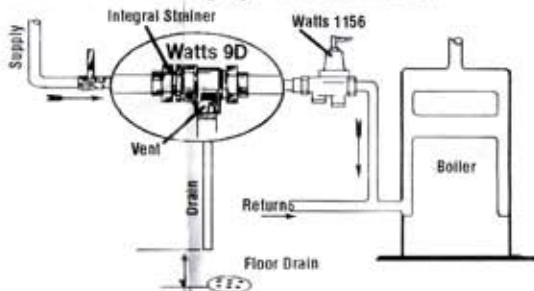

IMPORTANT: Inquire with governing authorities for local installation requirements.

9D Total Repair Kits

EDP No.	Kit No.	Size
0886010	RK 9DM2 T	1/2", 3/4"
0886011	RK 9DM3T	1/2"

Kit includes: Primary & Secondary checks, seat and two union seals

CALIFORNIA PROPOSITION 65 WARNING


WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. (Installer: California law requires that this warning be given to the consumer.)

For more information: www.wattsinc.com/prop65

Field Testing Procedure

Series 9D Backflow Preventer with Intermediate Atmospheric Vent

EQUIPMENT REQUIRED: Valve must be installed per drawing and one (1) flexible hose with adapters furnished for testing.

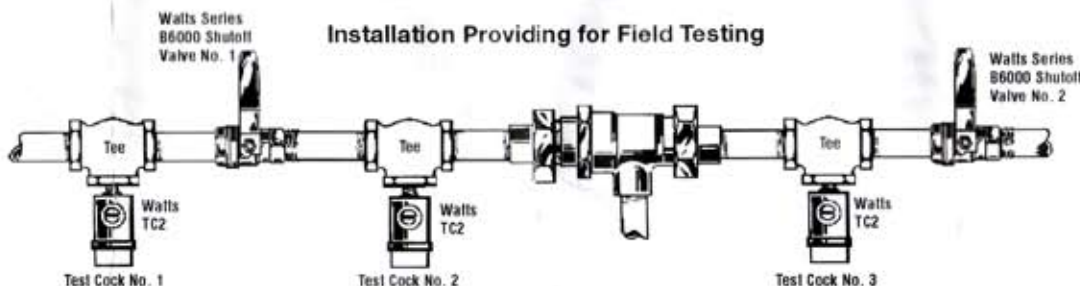

Test No. 1

- Purpose:** To check operation of air break.
- Requirements:** When supply pressure drops to atmospheric, air break must relieve pressure between both checks.
- Procedure:** Close shutoff valves No. 1 and No. 2. Open test cock No. 2.
- Observe:** Some water should drain from vent indicating that diaphragm has lifted off its seat and opened the chamber between the checks to atmosphere.

Test No. 2

- Purpose:** To test for tightness of second check Valve.
- Requirement:** Second check must be drip tight when pressure is applied to downstream side of valve.
- Procedure:** Close shutoff valves No. 1 and No. 2. Open test cock No. 2. Connect flexible hose from test cock No. 1 to test cock No. 3. Open test cock No. 1 and No. 3 admitting line pressure to downstream side of second check valve. Water must not drip continuously from vent. If water drips continuously from vent, second check is leaking.

A LEADER IN VALVE TECHNOLOGY
WATTS
REGULATOR
Since 1874
Watts Industries, Inc.
Water Products Division • Safety & Control Valves

USA: 815 Chestnut St., No. Andover, MA 01845-0098; www.wattsreg.com
Canada: 5435 North Service Rd., Burlington, ONT. L7L 5H7; www.wattsusa.com



LIMITED WARRANTY: Watts Regulator Company warrants each product against defects in material and workmanship for a period of one year from the date of original shipment. In the event of such defects within the warranty period, the Company will, at its option, replace or recondition the product without charge. This shall constitute the exclusive remedy for breach of warranty, and the Company shall not be responsible for any incidental or consequential damages, including without limitation, damages or other costs resulting from labor charges, delays, vandalism, negligence, fouling caused by foreign material, damage from adverse water conditions, chemicals, or any other circumstances over which the Company has no control. This warranty shall be invalidated by any abuse, misuse, misapplication or improper installation of the product. THE COMPANY MAKES NO OTHER WARRANTIES EXPRESS OR IMPLIED EXCEPT AS PROVIDED IN THIS LIMITED WARRANTY.